

M351R




8



11

()
/

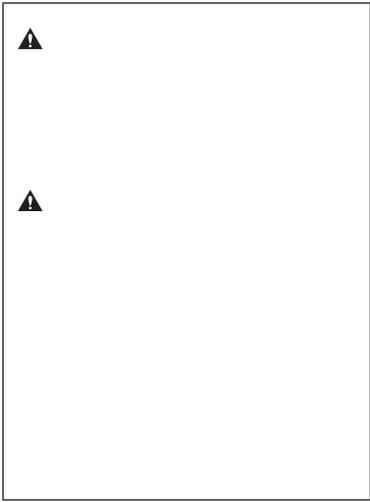

IEC60825-1:2014 EN60825-1


CLASS 1 LASER PRODUCT
LASER KLASSE 1
APPAREIL À LASER DE CLASSE 1
APPARECCHIO LASER DI CLASSE 1
PRODUCTO LÁSER DE CLASE 1
APARELHO A LASER DE CLASSE 1
LUOKAN 1 LASER-TUOTE
LASERPRODUKT KLASSE 1

-
-
-




⚠	CAUTION	ATENCIÓN	ATTENTION
	ATTENZIONE	VORSICHT	CUIDADO
	注意	주의	⚠

[]

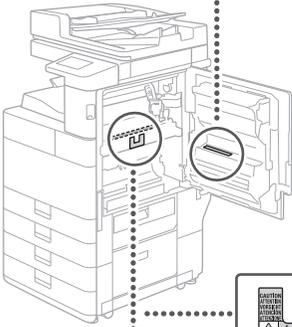

⚠ CAUTION ATENCIÓN ATTENTION ATTENZIONE VORSICHT CUIDADO 注意 주의 ⚠

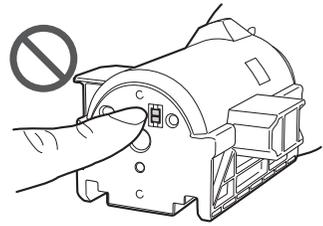

1. 2.4 - 2.4835 GHz (EIRP)
 - 10dBi ≤100 mW
 - ≤20 dBm
 - 10dBi ≤10 dBm / MHz(EIRP)
 - 20 ppm (2.4 - 2.4835GHz)
 - ≤-80 dBm / Hz (EIRP) () ()
 - 2.5)
 - ≤-36 dBm / 100 kHz (30 - 1000 MHz)
 - ≤-33 dBm / 100 kHz (2.4 - 2.4835GHz)
 - ≤-40 dBm / 1 MHz (3.4 - 3.53 GHz)
 - ≤-40 dBm / 1 MHz (5.725 - 5.85 GHz)
 - ≤-30 dBm / 1 MHz (1 - 12.75 GHz)
2. ()
- 3.



 
M351R

- -AN

M351R

- -AN





目录

快速设置

配置机器.....	8
.....	8

快速操作

.....	12
.....	12
.....	12
.....	12
复印	13
打印	13
扫描	14
装入纸张.....	15
.....	15
.....	16
如果出现问题	17
.....	17
.....	17
.....	17
.....	17
.....	17
.....	18
/	18
/	18
.....	19
.....	19





1.

2.

ABCD-123



2



1. /
- 2.
3. /
4. PIN 7654321
- 5.
6. /
- 7.
- 8.
- 9.



IP:192.168.

PMW-STNW



 
PMW-INDR



PMW-STCM

Empty search bar


PMW-STSG






正确放置原稿文档

将原稿放置于稿台玻璃上

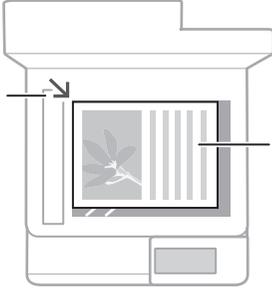

将原稿放入输稿器

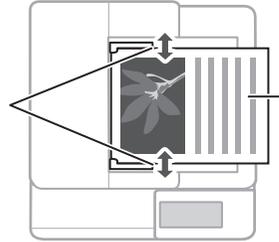





扫描

- 1.
- 2.

<

 装入纸张

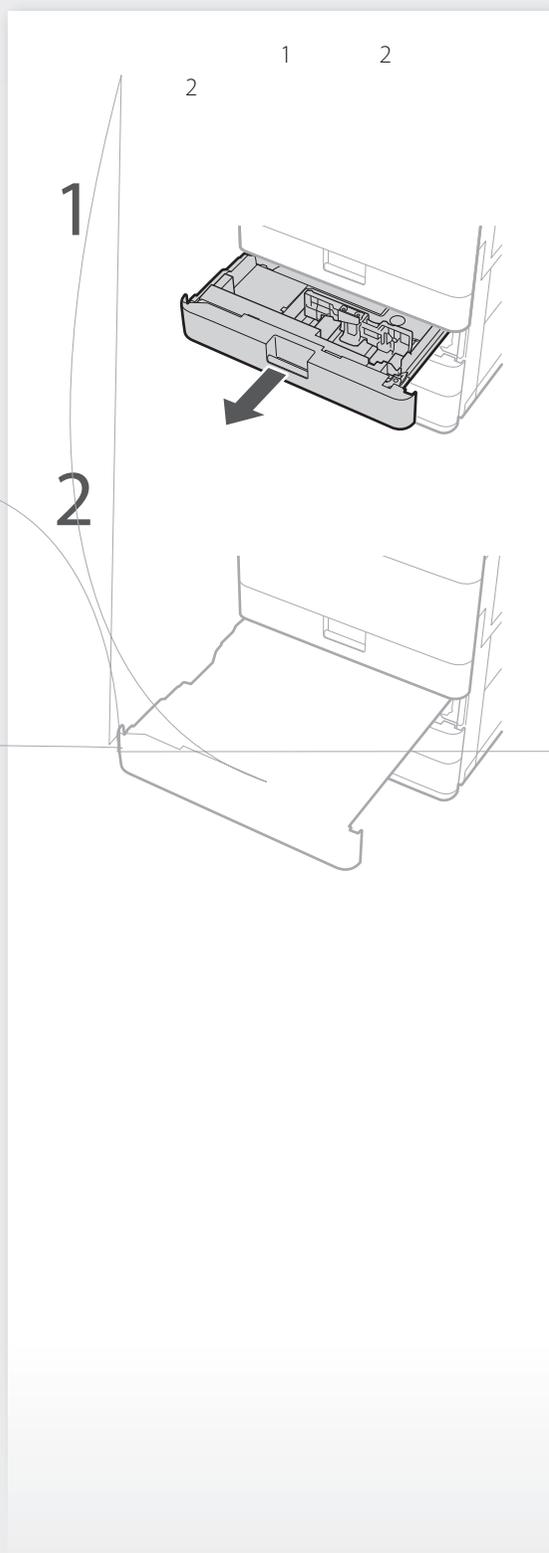





装入多功能托盘

注意！

1

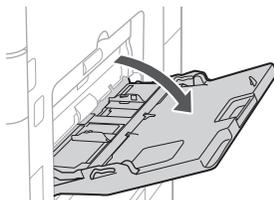


2

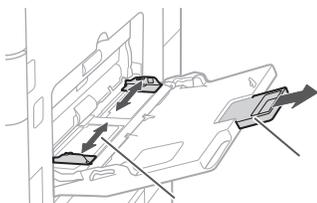

注释

3

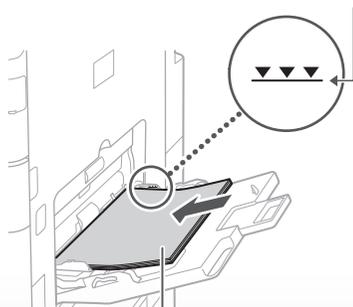

4

< >

4

/

5

< >

6


7

< >

8

如果出现问题


-
-

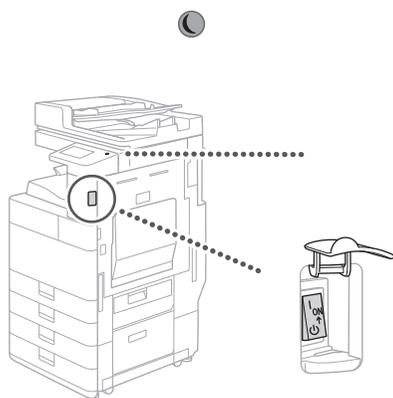



图像移位/歪斜

解决方案

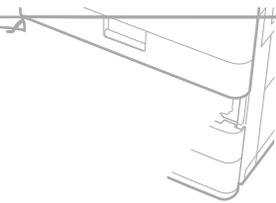


图像上出现黑色条纹

解决方案

1.

注释

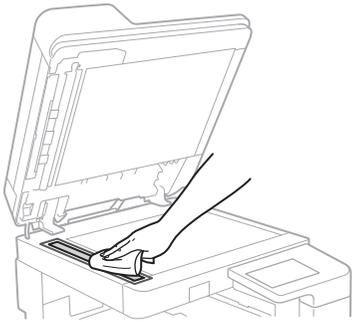

2.

注释

< >

出现渗透

解决方案 1

1.

< () >



2.

< >

解决方案 2

1.

2.

< >

3.



4.



5.

< >

deli

2020. 7